

Super-cosy, high-temperature Heating Pad


Model : HP3040A (Regular size)



- Overheating protection
- Quick heat-up
- 4 temperature settings
- Even heat distribution
- Cosy, removable and washable cover
- Automatic switch-off after 90 mins
- Ergonomic controller with temperature level display and LED indicator
- Regular size 30 x 40 cm
- CE approval



Overheating protection

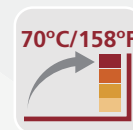

Quick heat-up



4 temperature settings



Even heat distribution




Cosy, removable and washable cover



Automatic switch-off after 90 mins

Three Safety Levels

- 1 Short circuit safety
- 2 Overheat protection via thermal fuse
- 3 PTC temperature monitoring

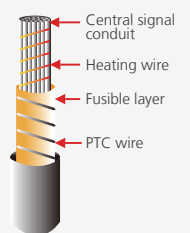

Heating Setting

4 heating levels can be selected and are displayed in the digital LCD.


Auto-off LED Indicator

Auto-off LED Indicator
A LED indicates the "Auto-Off" function is ON.



Cosy Fabric Cover

The cover offers luxurious softness and soothing comfort and is easy washable.

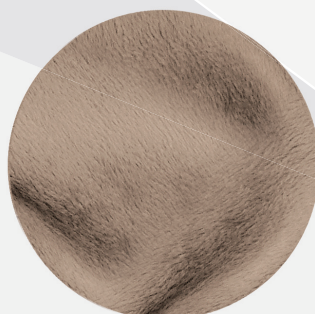

| Model | Qty per carton | Carton volume |
|-------------|----------------|---------------|
| HP3040A | 6 pcs | 0.0332cbm/ctn |
| QTY per 20' | QTY per 40' | QTY per 40'HQ |
| 4808 pcs | 10280 pcs | 12356 pcs |